

What to do if...

List of Warning/Indicator Lights

Stop the vehicle immediately. Continuing to drive the vehicle may be dangerous.



(U.S.A.)

Brake system warning light (red indicator)



(Canada)

Stop the vehicle immediately.



Charging system warning light



Low engine oil pressure warning light



High coolant temperature warning light

Have the vehicle inspected immediately.



(U.S.A.)

Malfunction indicator lamp



(Canada)



SRS warning light



(U.S.A.)

ABS warning light



(Canada)



Electric power steering system warning light



(Flashes)

Pre-collision system warning light (if equipped)



(Comes on)

Slip indicator light



Brake system warning light (yellow indicator)



Automatic headlight leveling system warning light (if equipped)








(Blinking and then continuously on)

Tire pressure warning light


















For further information, refer to the Owner's Manual.

What to do if...

Follow the correction procedures.

	Open door warning light		Master warning light
	Low fuel level warning light		Tire pressure warning light*
	Seat belt reminder light	(Illuminates without blinking)	

See the Owner's Manual

	Turn signal indicator		"SPORT MODE" indicator
	Headlight indicator (U.S.A.)		Cruise control indicator
	Tail light indicator (Canada)		Radar cruise control indicator (if equipped)
	Headlight high beam indicator		Intuitive parking assist indicator (if equipped)
	Front fog light indicator (if equipped)		Slip indicator
	"READY" indicator		Pre-collision system warning light (if equipped)
	EV indicator	(Flashes faster)	
	EV drive mode indicator		Shift position indicators
	"ECO MODE" indicator		SRS airbag on-off indicator

For further information, refer to the Owner's Manual.

*: It also comes on due to natural causes such as natural air leaks and tire inflation pressure changes caused by temperature. Adjust the tire inflation pressure to the specified level. The light will turn off after a few minutes. In case the light does not turn off even if the tire inflation pressure is adjusted, have the system checked by your Lexus dealer.

If the electronic key does not operate properly

Unlocking and locking the doors



Use the mechanical key in order to perform the following operations:

- 1 Locks all the doors
- 2 Closes the windows* (turn and hold)
- 3 Unlocks the door

Turning the key rearward unlocks the driver's door. Turning the key once again within 3 seconds unlocks the other doors.

- 4 Opens the windows* (turn and hold)

*: This setting must be customized at your Lexus dealer.

What to do if...

Starting the hybrid system



- 1 Depress the brake pedal.
- 2 Touch the Lexus emblem side of the electronic key to the "POWER" switch.
If any of the doors is opened or closed while the key is being touched to the switch, an alarm will sound to indicate that the start function cannot detect the electronic key.
- 3 To change "POWER" switch modes:
Within 10 seconds of the buzzer sounding, release the brake pedal and press the "POWER" switch. Modes can be changed each time the switch is pressed.
To start the hybrid system: Press the "POWER" switch within 10 seconds of the buzzer sounding, keeping the brake pedal depressed.

In the event that the hybrid system still cannot be operated, contact your Lexus dealer.

If the electronic key battery becomes depleted, replace it with a new battery. For instructions on replacing the battery, refer to the Owner's Manual. If you need further assistance, contact your Lexus dealer.

What to do if...



If the hybrid system doesn't start

Make sure that the correct operating procedures have been followed.

Brake pedal

Make sure that the brake pedal is firmly depressed when attempting to start the hybrid system.

If the hybrid system still does not start, see the Owner's Manual for more information or contact your Lexus dealer.